


Changing filament


1

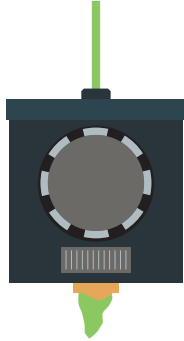

Heat the nozzle

Heat the nozzle to the temperature of the filament that is loaded now.

2

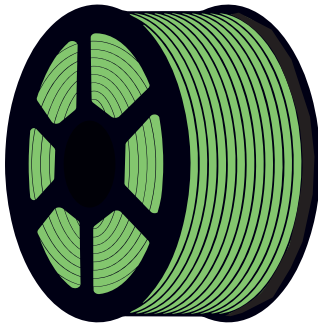

Unload and load

Unload the old filament, then feed in the new one until it comes out of the nozzle in the new colour.

3



Check the first layer

Watch the first layer of your next print to make sure the new filament sticks.

POWERED BY

