 


Printer maintenance




Clean the nozzle

Do a cold pull or run cleaning filament now and then to keep the nozzle from clogging.

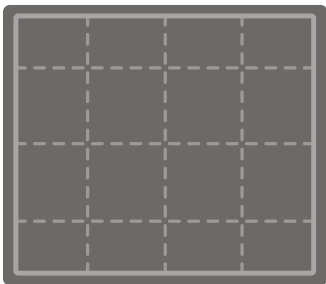

Check the plate

Look for scratches and warping, and clean the surface with isopropyl alcohol.

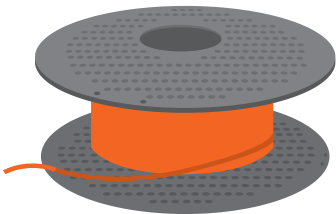

Check the filament path

Make sure the filament runs freely from the spool to the extruder, with no tangles, kinks or worn tubes.

POWERED BY

